


Methods to Control Existing Drywood Termite Infestations

	Vikane® gas fumigant	Chemical liquids, dusts, aerosols and foams	Electrocution (Electro-Gun)	Microwaves	Heat (Thermal Pest Eradication)
Methodology	Whole-structure treatment: The entire structure is tarped and thoroughly fumigated with Vikane, killing all detected and undetected termites.	Spot treatment: Detected, accessible colonies are treated by drilling small holes into which chemicals are injected.	Spot treatment: Detected, accessible colonies are treated with high-voltage, low current, which kills termites in a localized area. ⁶	Spot treatment: Detected, accessible colonies are treated. Reflective material is placed on outside walls to contain microwaves. Microwave energy heats and kills termites in a localized area.	Spot/localized treatment: The temperature inside the structure is raised with propane heaters to 140 to 150 F for several hours to one day. Internal wood temperatures must be raised to 120 F for at least 33 minutes to kill termites. ^{6,7} (This method requires tarping to treat the entire structure.)
Third-Party Validation of Efficacy	Most thorough, consistent and efficacious treatment of infested structures were evaluated in more than 20 years of university research and nearly 50 years of commercial use. ^{1,2,3} Researchers and pest control operators acknowledge that whole-house fumigation, compared to spot treatments, penetrates better into concealed locations and large volumes of wood are treated more efficiently. ⁴	Research indicates surface treatment alone is inadequate to control existing infestations. ^{2,5} The efficacy is highly variable based on active ingredient and formulation. Research documents that surface treatment or gallery injections of liquid borate formulations did not provide adequate control of drywood termites. ^{2,5} There is no published, peer-reviewed research on efficacy of many active ingredients (fipronil, imidacloprid, citrus oil) and formulations (foam) when applied in infested structures.	Efficacy in limited field trials is highly variable and dependent upon the drill-and-pin method (drill holes to insert copper wire into termite galleries to direct current). ¹	Efficacy in limited field trials is highly variable and dependent on treatment time and wattage. ¹	Efficacy in limited field trials is variable and dependent upon the lethal temperatures achieved in the cores of all infested wood. ¹
Limitations on Treatment Application by Termite Location in Structure	There are no limitations. Vikane penetrates all airspaces in termite galleries within the tarped structure to kill termites. ^{1,2}	Termite colony galleries must be accessible to the applicator. ^{2,5}	Termite colonies must be accessible to the applicator. Common building materials, such as metal, concrete and glass, ⁶ and depth of termites in wood ¹ can interfere with application and limit control.	Termite colonies must be accessible to the applicator. Metal in walls and heat sinks can interfere with application and limit control.	Termite colonies must be accessible to the applicator for localized treatment. Large, structural beams and wood in contact with heat sinks, such as concrete and tile, can retard heat distribution. ^{1,6,7}

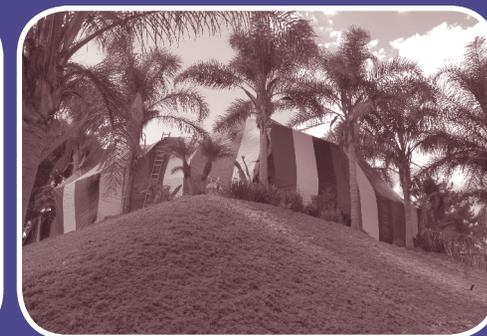

Methods to Control Existing Drywood Termite Infestations, *continued*

	Vikane® gas fumigant	Chemical liquids, dusts, aerosols and foams	Electrocution (Electro-Gun)	Microwaves	Heat (Thermal Pest Eradication)
Limitations on Efficacy by Applicator Ability to Detect Termites	There are no limitations. Vikane penetrates all airspaces in termite galleries to control detected and undetected termites. ^{1,2}	Detecting live termites is critical for treatment efficacy of spot and localized treatments. Undetected colonies will not be treated or controlled. Besides visual inspection, other detection methods include dogs, odor detectors, fiber optics, movement-sensitive devices and feeding-sensitive devices. These devices are infrequently used and, except for feeding-sensitive devices, adequate research has not been conducted to confirm their reliability to detect drywood termites. With the uncertainty of current detection methods, the secretive behavior of drywood termites and building construction (drywall or other wall coverings) concealing infestations, there is always doubt as to the location and extent of all drywood termite colonies in buildings that restrict accessibility and limit treatment. ⁶			
Possibility of Damage by Treatment Application	The possibility of damage is low when Vikane is used according to the label. Improper tarping may cause damage.	Injection holes in walls may need repair.	Up to 80 percent of treated wood in field trials had visible damage, including burn marks. ¹ Holes from the drill-and-pin method damage wall coverings, walls and wood members. ⁶ Electronic equipment may be damaged.	Microwave treatment is a potential fire hazard, and the heat generated may severely char wood surfaces or interiors. ^{1,6}	Heat treatment is a potential fire hazard. ¹ Heat may irreversibly damage heat-sensitive contents, including paint, ⁷ plumbing, ¹ electronic devices and appliances, cable wiring, plastic blinds, photo materials, audiotapes, videotapes, CDs, plants, batteries, food, cosmetics, spray cans, ammunition, Plexiglas and wooden artwork.

References Cited

¹Lewis, V.R. and M.I. Haverty. 1996. Evaluation of six techniques for control of the Western drywood termite (Isoptera: Kalotermitidae) in structures. *Journal of Economic Entomology* 89(4): 922-934.

²Scheffrahn, R.H., N.-Y. Su, and P. Busey. 1997. Laboratory and field evaluations of selected chemical treatments for control of drywood termites (Isoptera: Kalotermitidae). *Journal of Economic Entomology* 90(2): 492-502.

³Su, N.-Y., and R.H. Scheffrahn. 1986. Field comparison of sulfuryl fluoride susceptibility among three termites species (Isoptera: Kalotermitidae, Rhinotermitidae) during structural fumigation. *Journal of Economic Entomology* 79(4): 903-908.

⁴Lewis, V.R. 2003. IPM for Drywood Termites (Isoptera: Kalotermitidae). *Journal of Entomological Science* 38(2): 181-199.

⁵Scheffrahn, R.H., N.-Y. Su, J. Krecek, A.V. Liempt, V. Maharajh, and G.S. Wheeler. 1998. Prevention of colony foundation by *Cryptotermes brevis* and remedial control of drywood termites (Isoptera: Kalotermitidae) with selected chemical treatments. *Journal of Economic Entomology* 91(6): 1387-1396.

⁶Lewis, V.R. 2002. Drywood Termites. Pest Notes. University of California Agriculture and Natural Resources. Publication 7440.

⁷Woodrow, R.J. and J.K. Grace. 1998. Field Studies on the Use of High Temperatures to Control *Cryptotermes brevis* (Isoptera: Kalotermitidae). *Sociobiology* 32(1): 27-49.

These materials have been created specifically for Vikane® gas fumigant and no other structural fumigant. The information contained in these materials is based upon the product label and use instructions for Vikane and are not intended for use with other structural fumigants, which will have different product label requirements. These materials may not be copied or reproduced, in whole or in part, without the permission of Dow AgroSciences.

®Trademark of Dow AgroSciences LLC
 Vikane is a federally Restricted Use Pesticide.
 Always read and follow label directions.
 ©2006 Dow AgroSciences LLC